



SYSTEM SETTING

1. In Setup select System

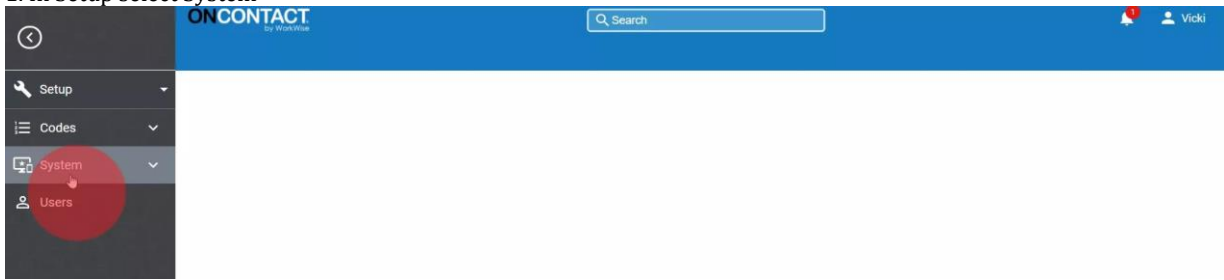

2. Select System Setup

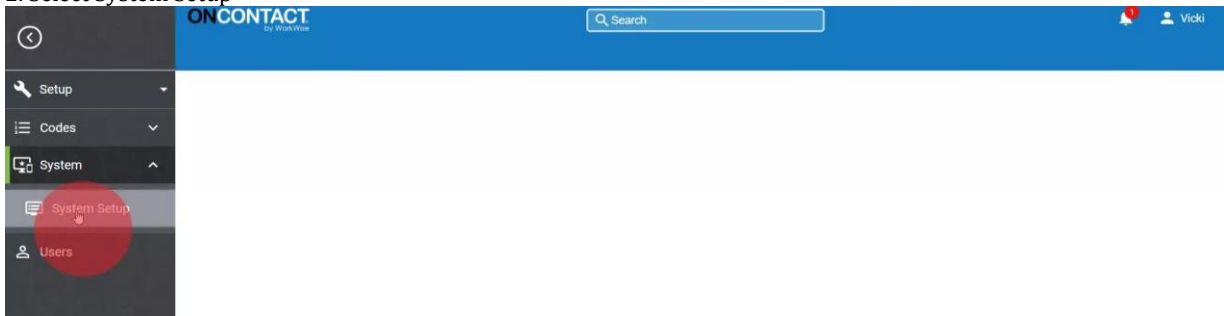

3. Change timeout, login and password rules, etc.

